


BATH AND DRYER VENT INSTALLATION INSTRUCTIONS

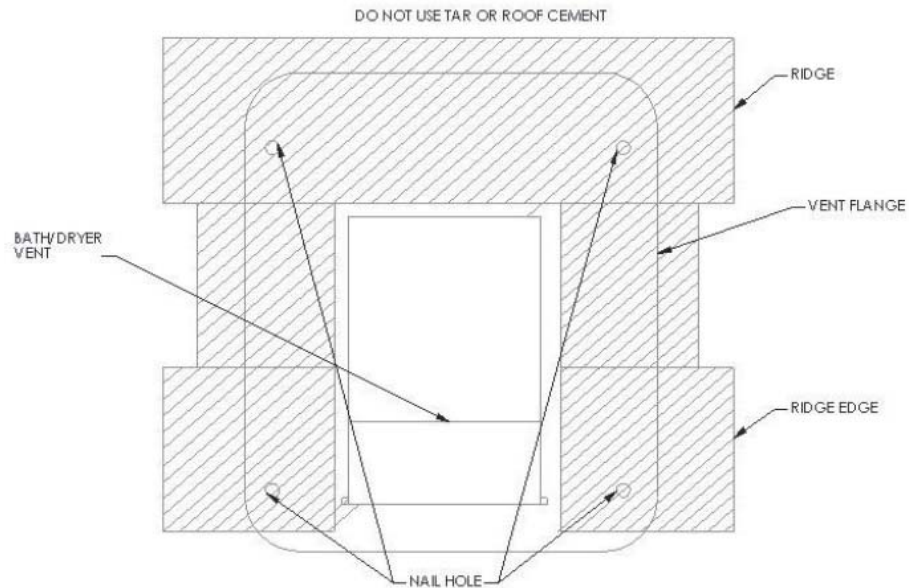

1. Secure vent with appropriate nails in nail holes.
2. Make sure all nail holes are covered by roofing material.
3. Cover as much of the Vent Flange as possible with the roofing material, especially the bottom two corners.
4. **VERY IMPORTANT!** When nailing or stapling the roofing material around our vent **DO NOT LET FASTENERS PENETRATE THE VENT FLANGE.**
5. Do not apply tar or any other asphalt based sealant to the vent. The plastic vents are designed to naturally conform to the surface, and do not require a sealant when installed properly.

Please Note: Air Vent, Inc. cannot be held responsible for failure to fasten vents in the designated areas, or any other non-compliance with the above instructions. If you have any questions, please call us at (800) 247-8368.